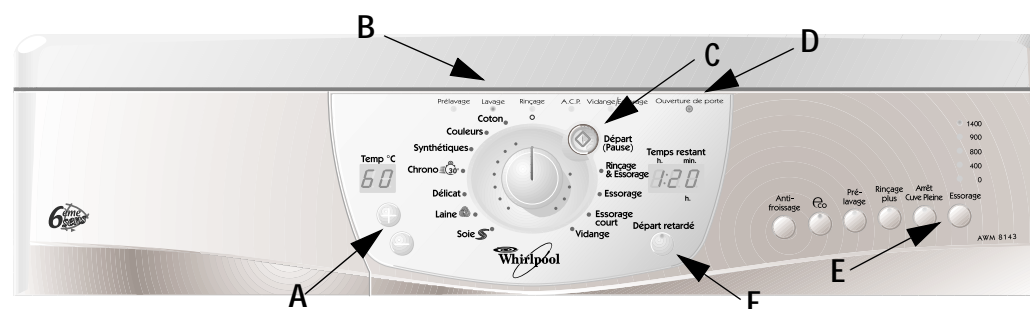


## GB AWM 8143

- A. Temperature Selection Buttons  
 B. Programme Sequence Indicator  
 C. "Start/Pause" Button  
 D. "Door Open" Indication  
 E. "Spin Speed Reduction" Button  
 F. "Start Delay" Button.







 
 
 
 
 
 

 
 
 
 
 
 




Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

\* : optional / Yes : dosing required

<sup>1</sup> For improved garment care spin speed is restricted to 900 rpm in this programme.

 
<sup>2</sup> For improved garment care spin speed is null in this programme.

Programme	Care Labels	Type of wash/Notes	Max Load	Detergents and additives				Special options							Max Spin Speed	Temperature
				Bleach	Softener	Main Wash	Prewash	Start Delay	Easy Ironing	Eco	Prewash	Intensive Rinse	Rinse Hold	Spin Speed Reduction		
								kg					<i>Départ retardé</i>	<i>Anti-froissage</i>	<i>Eco</i>	<i>Pre-lavage</i>
White Cotton <i>Coton</i>		Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>With heavily soiled laundry the additional “Prewash” option can be selected as well.</i>	5.5	*	*	Yes	*	*	*	*	*	*	*	*	1400	20 to 95
Coloured cotton <i>Couleurs</i>	  	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.5	*	*	Yes	*	*	*	*	*	*	*	*	1400	20 to 60
Synthetics <i>Synthétiques</i>	   	Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	—	*	Yes	*	*	*	*	*	*	*	* <sup>1)</sup>	900 <sup>1)</sup>	20 to 60
Rapid Plus <i>Chrono</i> 	   	Slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	3.0	—	*	Yes	—	*	*	—	—	*	*	*	1400	20 to 60
Delicates <i>Délicat</i>	 	Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	—	*	Yes	*	*	—	—	*	—	*	* <sup>1)</sup>	900 <sup>1)</sup>	20 to 40
Wool <i>Laine</i>		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select “Rinse Hold” do not leave items to soak for too long.</i>	1.0	—	*	Yes	—	*	—	—	—	—	*	* <sup>1)</sup>	900 <sup>1)</sup>	20 to 40
Silk <i>Soie</i>		Textiles made of silk, linen, wool and viscose marked as “handwashable”. <i>If you select “Rinse Hold” do not leave items to soak for too long. No spinning.</i>	1.0	—	*	Yes	—	*	—	—	—	—	*	—	0 <sup>2)</sup>	20 to 30
Rinse + spin <i>Rinçage + Essorage</i>	—	<i>Same as the last rinse and the final spin in the “Coloured Cotton” programme.</i>	5.5	—	*	—	—	*	*	—	—	*	*	*	1400	—
Spin <i>Essorage</i>	—	<i>In this programme spinning is intensive. Same as the spin cycle in the “Coloured Cotton” programme.</i>	5.5	—	—	—	—	*	—	—	—	—	—	*	1400	—
Gentle spin <i>Essorage court</i>	—	<i>In this programme spinning is gentle. Same as the spin cycle in the “Wool” programme.</i>	1.5	—	—	—	—	*	—	—	—	—	—	* <sup>1)</sup>	900 <sup>1)</sup>	—
Drain <i>Vidange</i>	—	<i>Drain only - no spinning. Alternative method of terminating programme after “Rinse Hold”.</i>	—	—	—	—	—	—	—	—	—	—	—	—	—	—

Whirlpool is a registered trademark of Whirlpool USA.

5019 301 05205

# CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
White Cotton	95	5.5	51**	2.00	2:15
Coloured cotton	60	5.5	47	1.04	2:25
Coloured cotton	40	5.5	47	0.65	2:15
Synthetics	60	2.5	55	0.80	1:25
Synthetics	40	2.5	50	0.60	1:20
Rapid Plus 	30	3.0	37	0.40	0:30
Delicates	30	1.5	50	0.50	0:45
Wool	40	1.0	55	0.50	0:40
Silk	30	1.0	37	0.40	0:40

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\*To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

# ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergents as described in the programme table or in the chapter "Detergents and Additives" in the booklet.

1. Turn the **programme selector knob** to the desired programme.
2. The remaining time display shows the duration of the chosen programme (in hours and minutes) and the pilot lamp of the **"Start/Pause"** button is flashing.
3. The programme sequence and the predefined spin speed indication corresponding to the selected programme lights up.  
The recommended temperature (see the indicator) can be altered by pressing "+" or "-" button.

# SELECT ANY DESIRED OPTION

Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

# "Eco Wash" button

- The duration of the wash is extended and the temperature reduced to save up to 40% of energy but maintaining good washing results.

# "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. The cycle time increases approximately 15 min.

# "Intensive Rinse" button

- More water and a longer time in rinse cycle is added.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

# "Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programme "Synthetics" or "Delicates".
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

**Note:** The programme stops to "Rinse Hold" at the time the "Rinse Hold" light in the programme flow indication is on.

# Terminate the "Rinse Hold" option:

- Press the "Rinse Hold" button again; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the "Start/Pause" button again when flashing.

# "Easy Ironing" button

- Can be used together with Cotton and Synthetics programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very soft.

# "Spin Speed Reduction" button

- Every programme has an automatic predefined maximum spin speed.
- Press the button to set another spin speed.
- If the spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

# START DELAY

The "Start Delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Select programme, temperature and options.
- Press the "Start Delay" button to select the delay time by 1 to 23 hours;
- Press the **"Start/Pause"** button.
- The time delay indication disappears when the programme starts and it is replaced by the remaining time.
- The number of hours preselected can later be reduced pressing again the "Start Delay" button.

# To cancel the "Start Delay".

- Turn the programme selector to the "0" position.
- Reselect the desired programme and options and press the **"Start/Pause"** button.

# PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The pilot lamp of the "Start/Pause" button lights up.

The indicator lamps show the sequence reached in the programme. After starting the programme, the sequence indication runs from left to right through Wash, Rinse, Spin.

When the sequence of the programme is finished the corresponding lamp goes out.

# DOOR LOCK

The door can be opened when the "Door Open" indication is on.

# PROGRAMME END

- The remaining time is on "0:00" and all the lights of the programme sequence indication are off.
1. Turn the programme selector to the "0" position.
  2. Turn the water supply tap off.
  3. Open the door and unload the machine.
  4. Close the tap and leave the door ajar to allow the drum to dry out.

# CHANGE THE PROGRAMME, TEMPERATURE, OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

# CANCEL A PROGRAMME BEFORE THE END

1. Press the **"Start/Pause"** button to pause the programme. The light flashes.
2. Set the programme selector to "Drain". The spin indicators show "0" and the remaining time shows "0:02".
3. Press the **"Start/Pause"** button to start the drain programme.